



Ax1

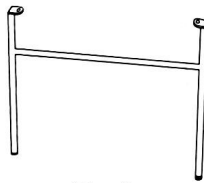

Bx1

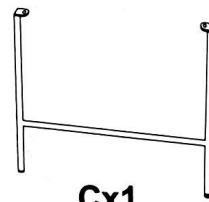

Cx1



Dx4




Ex4



Fx1

Install all the relevant screws, but do not tighten them completely at the very beginning.
Tighten the screws fully one by one.

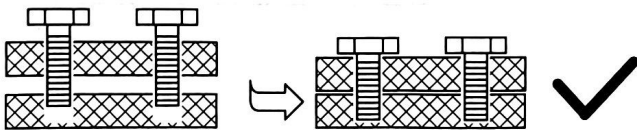

Don't tighten up the screw before you start next mounting during the installation.

