

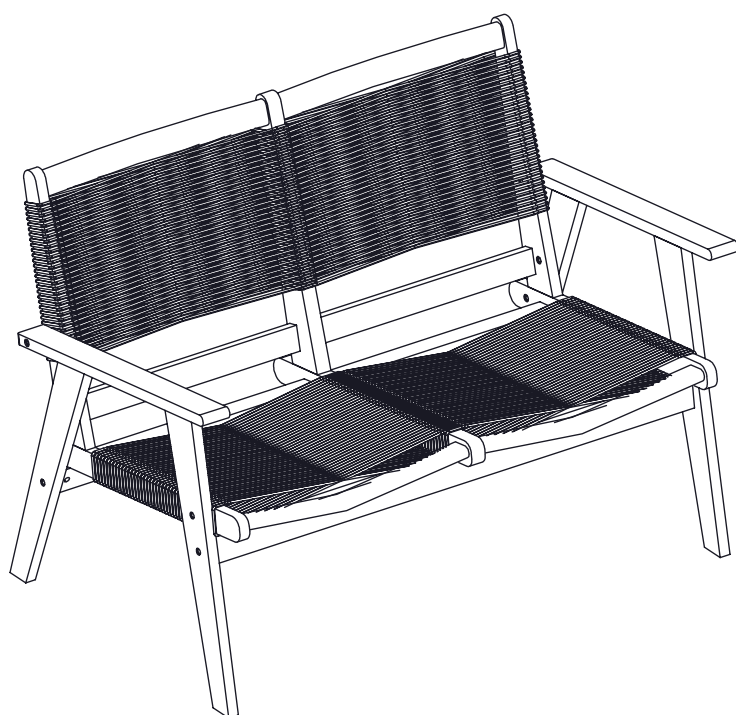

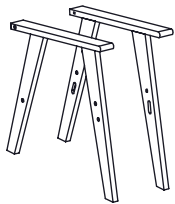





Monteringsanvisning - Assemblyinstruction - Einbauzeichnung



| No. |                                                                                   | Qty. |
|-----|-----------------------------------------------------------------------------------|------|
| 1   |  | 1    |
| 2   |  | 1    |
| 3   |  | 2    |
| 4   |  | 2    |

| No. |                                                                                                | Qty. |
|-----|------------------------------------------------------------------------------------------------|------|
| A   | <br>M6 x 40 | 6    |
| B   | <br>M6 x 60 | 5    |
| C   | <br>M6 x 13 | 4    |
| D   | <br>M6 x 80 | 2    |
| E   | <br>M4 x 60 | 1    |

## Step 1:

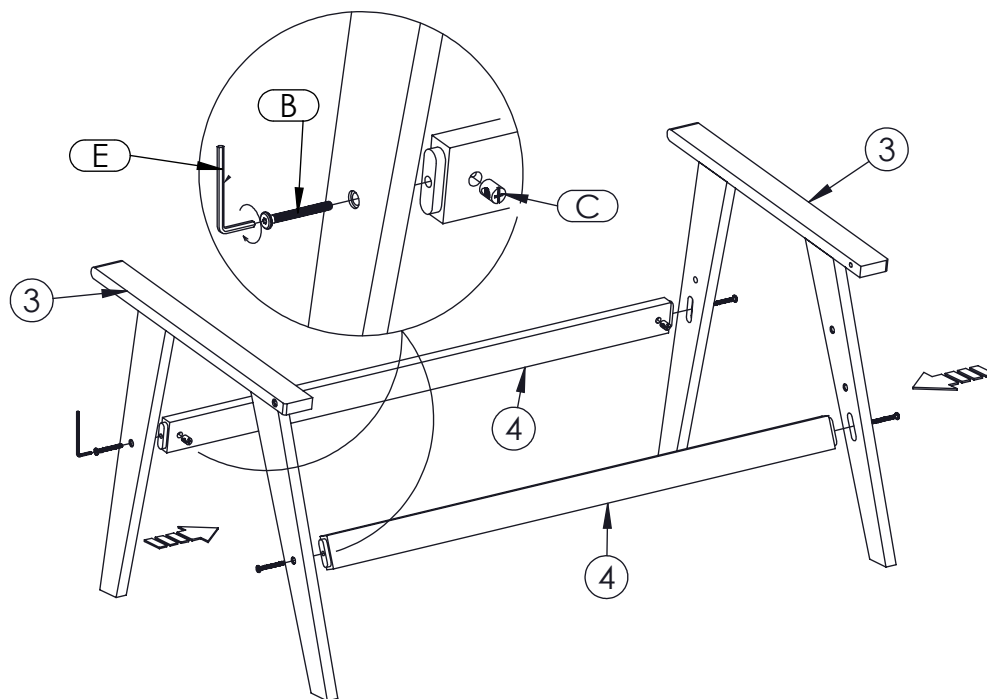


PLEASE KINDLY NOTE THAT AFTER ASSEMBLED , THEN TIGHTEN ALL THE SCREWS


OBSERVERA ATT EFTER MONTERING SÄTTAR DAN HELA SKRUVEN

BITTE BEACHTEN SIE, DASS NACH DEM ZUSAMMENBAU DIE SCHRAUBE ANZIEHEN

Step 2:

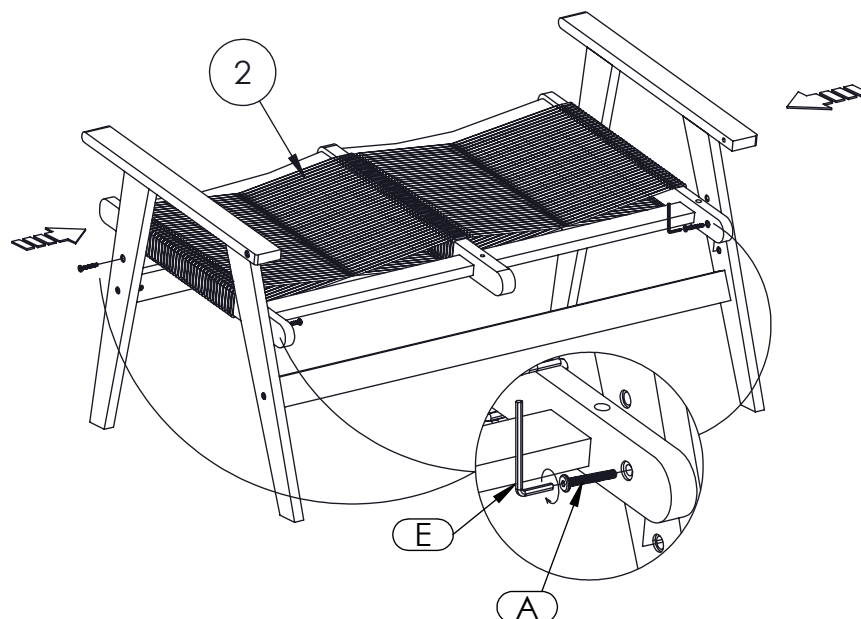

Step 3:

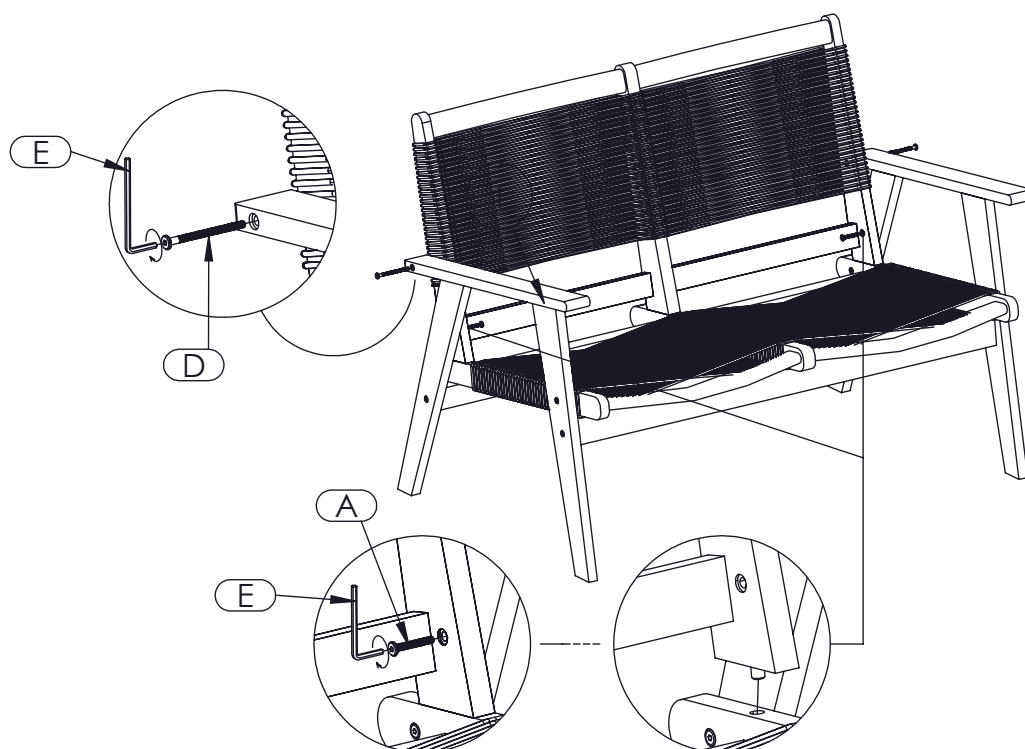


PLEASE KINDLY NOTE THAT AFTER ASSEMBLED , THEN TIGHTEN ALL THE SCREWS

OBSERVERA ATT EFTER MONTERING SÄTTAR DAN HELA SKRUVEN

BITTE BEACHTEN SIE, DASS NACH DEM ZUSAMMENBAU DIE SCHRAUBE ANZIEHEN

Step 2:

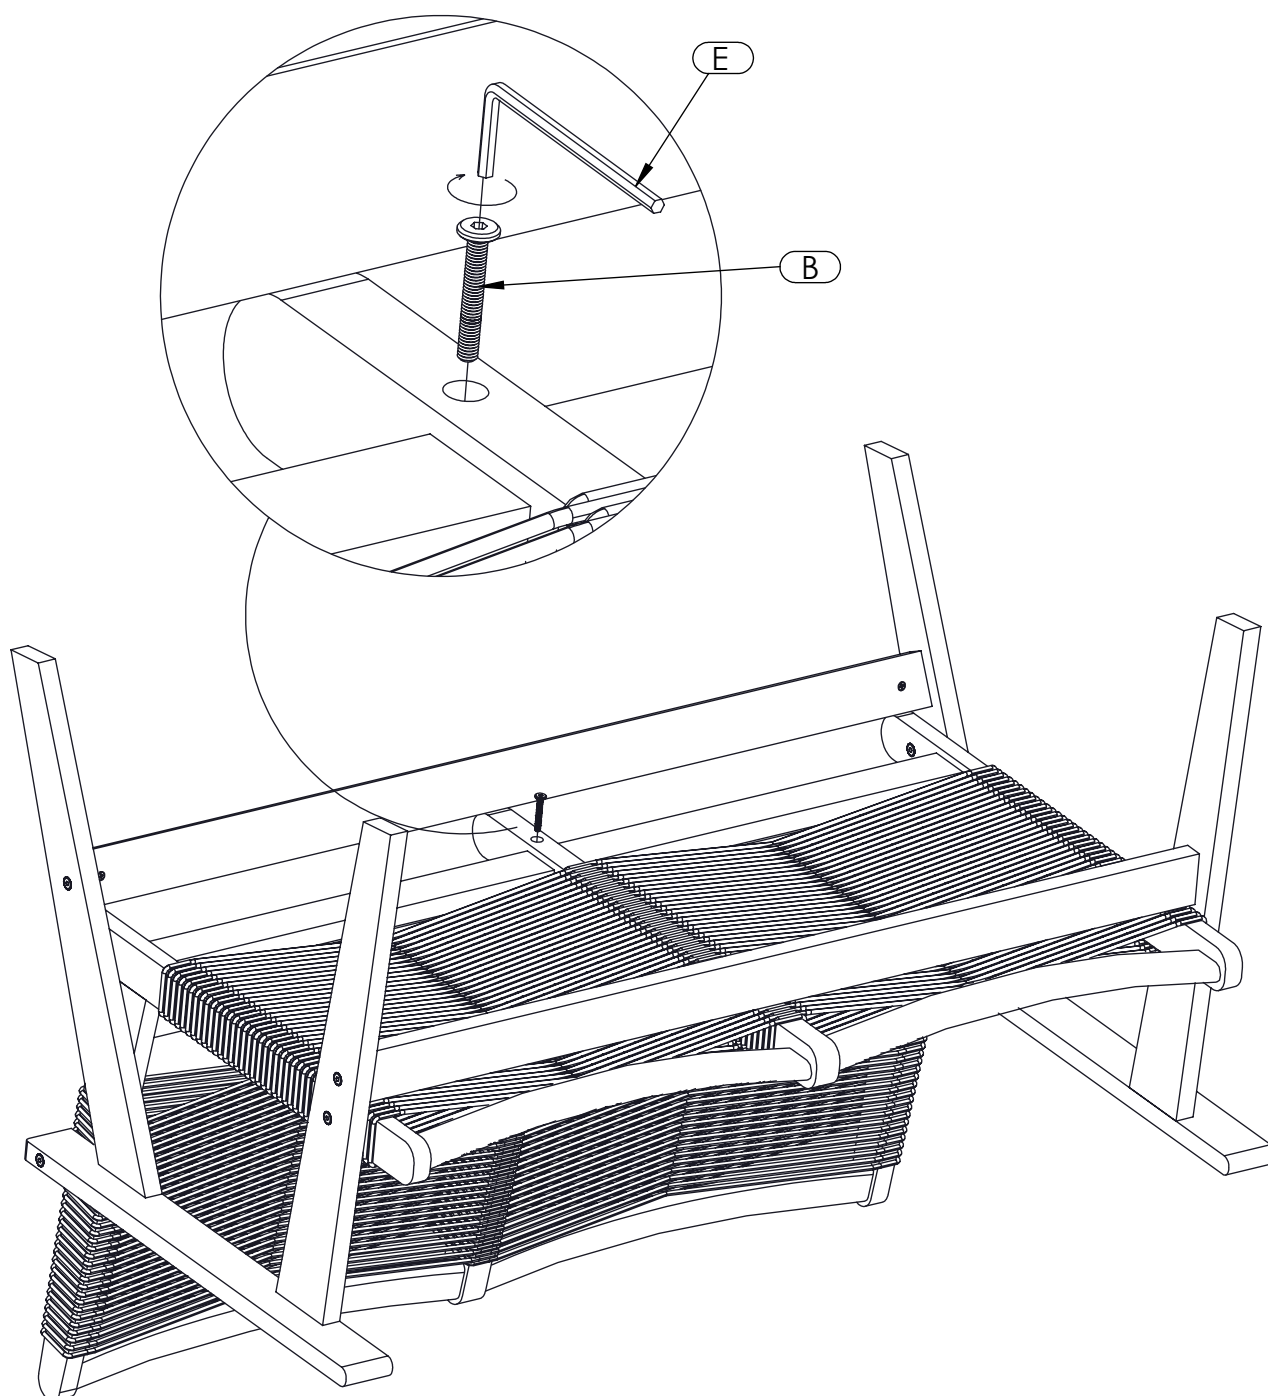

PLEASE KINDLY NOTE THAT AFTER ASSEMBLED , THEN TIGHTEN ALL THE SCREWS

OBSERVERA ATT EFTER MONTERING SÄTTAR DAN HELA SKRUVEN

BITTE BEACHTEN SIE, DASS NACH DEM ZUSAMMENBAU DIE SCHRAUBE ANZIEHEN